

1 HP COMMERCIAL HAND BLENDER

MODELS:

KHBC412OB0 (Onyx Black)

KHBC414OB0 (Onyx Black)

KHBC416OB0 (Onyx Black)

KHBC418OB0 (Onyx Black)

KHBC420OB0 (Onyx Black)

5KHBC412EOB0 (Onyx Black - Europe)

5KHBC414EOB0 (Onyx Black - Europe)

5KHBC416EOB0 (Onyx Black - Europe)

5KHBC418EOB0 (Onyx Black - Europe)

5KHBC420EOB0 (Onyx Black - Europe)

5KHBC412BOB0 (Onyx Black - United Kingdom)

5KHBC414BOB0 (Onyx Black - United Kingdom)

5KHBC416BOB0 (Onyx Black - United Kingdom)

5KHBC418BOB0 (Onyx Black - United Kingdom)

5KHBC420BOB0 (Onyx Black - United Kingdom)

5KHBC412AOB0 (Onyx Black - Australia)


5KHBC414AOB0 (Onyx Black - Australia)

5KHBC416AOB0 (Onyx Black - Australia)

5KHBC418AOB0 (Onyx Black - Australia)

5KHBC420AOB0 (Onyx Black - Australia)

BLENDER PARTS

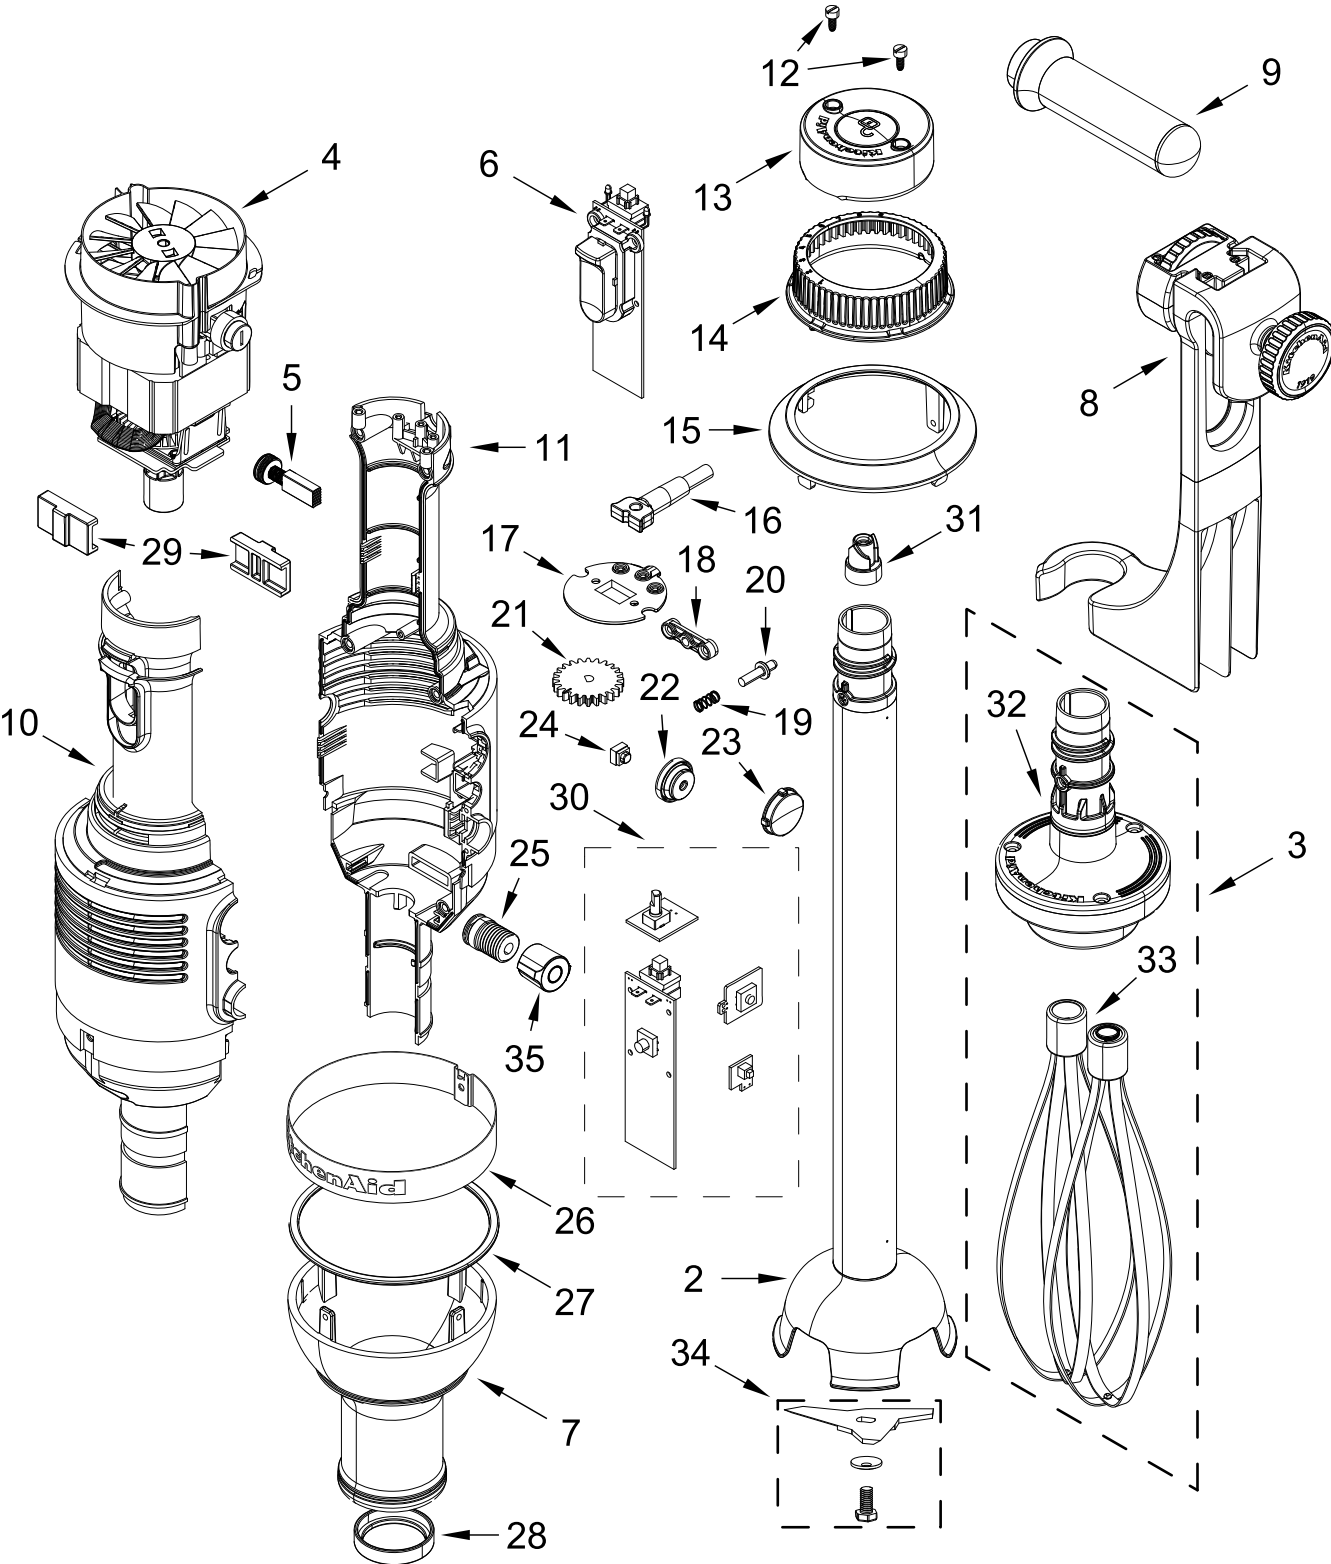

BLENDER PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8	W10860163	Bowl Clamp Assembly	22	W10860179	Rubber, Continuous Run
	W10831307	Use & Care Guide	9	W10860164	Secondary Handle	23	W10860181	Button, Continuous Run
	W10859533	Use & Care Guide (Europe/United Kingdom)	10	W10860165	Motor Housing, Front	24	W10860182	Rubber, Interlock Switch
	W10859535	Use & Care Guide (Australia)	11	W10860166	Motor Housing, Back	25	W10860183	Nut, Handle
2	W10860149	Blender Arm - 12"		W11082552	Motor Housing, Back (Europe/United Kingdom)	26	W10860184	Trim Band (United States/Australia)
	W10860150	Blender Arm - 14"		W11082553	Motor Housing, Back (Australia)		W11082557	Trim Band (Europe/United Kingdom)
	W10860151	Blender Arm - 16"	12	W10860167	Screw, Handle Cap	27	W10860186	Gasket
	W10860152	Blender Arm - 18"	13	W10860168	Handle Cap	28	W10860187	Rubber, Blender Arm
	W10860153	Blender Arm - 20"	14	W10860169	Speed Selector Button	29	W10860188	Rubber, Motor Side
3	W10860157	Whisk	15	W10860170	Speed Selector Base	30	W10860191	PCBA Assembly
4	W10860158	Motor Assembly	16	W10860171	Cord Lock		W11082558	PCBA Assembly (Europe/United Kingdom/Australia)
	W11082549	Motor Assembly (Europe/United Kingdom/Australia)	17	W10860172	Power Cord	31	W10860192	Adapter, Blender
5	W10860159	Carbon Brush Assembly		W11082555	Power Cord (Europe)	32	W10860194	Gearbox, Whisk
				W11082554	Power Cord (United Kingdom)	33	W10860196	Tines, Whisk
6	W10860161	PCBA & Switch Assembly (Includes 30)		W11082556	Power Cord (Australia)	34	W10860889	Blade
	W11082551	PCBA & Switch Assembly (Includes 30, Europe/United Kingdom/Australia)	18	W10860173	Spring Stop Plate	35	W10918469	Cap, Hub
			19	W10860174	Spring, Interlock			
			20	W10860177	Knob, Agitator			
7	W10860162	Apron Assembly	21	W10860178	Pinion, Speed Selector			