 
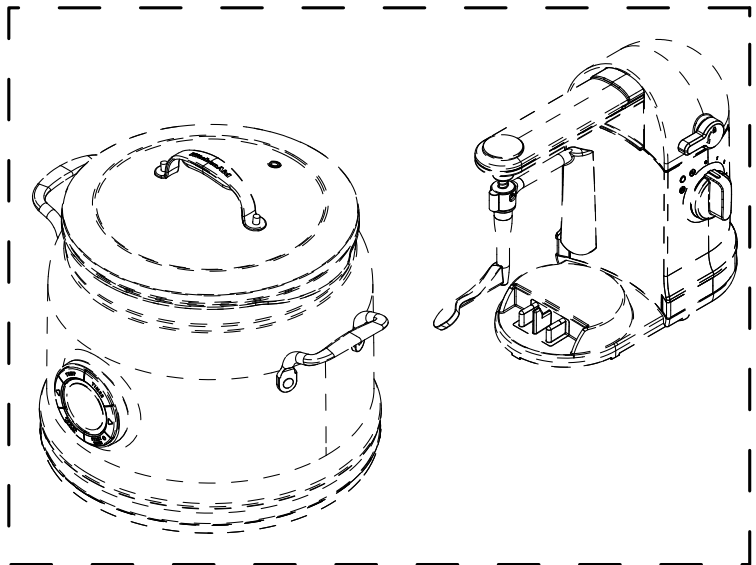 
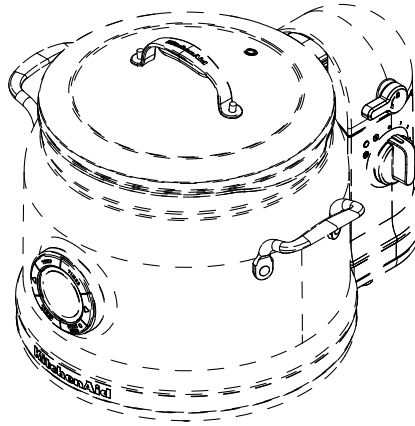 
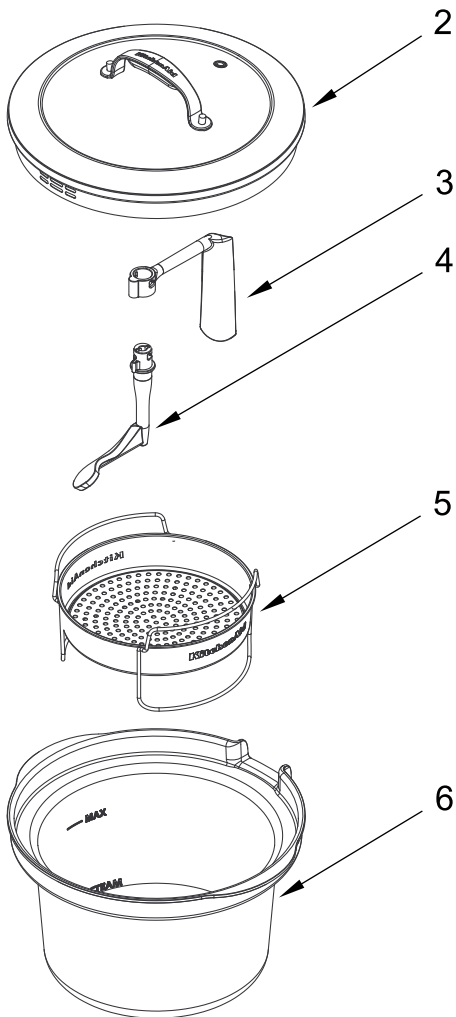 


MULTI COOKER AND STIRRING TOWER

MODELS:

KMC4241OB0 (Multi-Cooker - Onyx Black)
KMC4241ER0 (Multi-Cooker - Empire Red)
KMC4241BU0 (Multi-Cooker - Cobalt Blue)
KMC4241CA0 (Multi-Cooker - Candy Apple)
KMC4241GA0 (Multi-Cooker - Green Apple)
KMC4241GC0 (Multi-Cooker - Gloss Cinnamon)
KMC4241MS0 (Multi-Cooker - Medallion Silver)
KMC4241MY0 (Multi-Cooker - Majestic Yellow)
KMC4241TG0 (Multi-Cooker - Tangerine)
KMC4241AQ0 (Multi-Cooker - Aqua Sky)
KMC4244QOB0 (w/Stirring Tower - Onyx Black)
KMC4244QER0 (w/Stirring Tower - Empire Red)
KMC4244QBU0 (w/Stirring Tower - Cobalt Blue)
KMC4244QGA0 (w/Stirring Tower - Green Apple)
KMC4244QGC0 (w/Stirring Tower - Gloss Cinnamon)
KMC4244QMY0 (w/Stirring Tower - Majestic Yellow)
KMC4244QTG0 (w/Stirring Tower - Tangerine)
KMC4244QSS0 (w/ Stirring Tower - Stainless Steel)
KST4054OB0 (Stirring Tower - Onyx Black)
KST4054ER0 (Stirring Tower - Empire Red)
KST4054BU0 (Stirring Tower - Cobalt Blue)
KST4054GA0 (Stirring Tower - Green Apple)
KST4054GC0 (Stirring Tower - Gloss Cinnamon)
KST4054MS0 (Stirring Tower - Medallion Silver)
KST4054MY0 (Stirring Tower - Majestic Yellow)
KST4054TG0 (Stirring Tower - Tangerine)
KST4054AQ0 (Stirring Tower - Aqua Sky)
KST4054CU0 (Stirring Tower - Cobalt Blue)
5KMC4241EOB0 (Multi-Cooker - Onyx Black - EU)
5KMC4241EER0 (Multi-Cooker - Empire Red - EU)
5KMC4241EAC0 (Multi-Cooker - Almond Creme - EU)
5KMC4241ESS0 (Multi-Cooker - Stainless Steel - EU)
5KMC4244EER0 (w/Stirring Tower - Empire Red - EU)
5KMC4244EAC0 (w/Stirring Tower - Almond Creme - EU)
5KST4054EOB0 (Stirring Tower - Onyx Black - EU)
5KST4054EER0 (Stirring Tower - Empire Red - EU)
5KST4054ECU0 (Stirring Tower - Contour Silver - EU)
5KST4054EAC0 (Stirring Tower - Almond Creme - EU)

UNIT PARTS

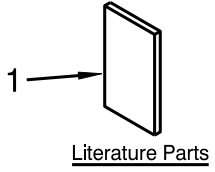

UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W10663378	Use and Care Guide, US (Multi Cooker)
	W10663386	Use and Care Guide, US (Stirring Tower)
	W10663380	Use and Care Guide, European (Multi Cooker)
	W10663387	Use and Care Guide, European (Stirring Tower)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
2	W10726710	Lid, Glass Assembly
3	W10726707	Wand, Stir
4	W10726709	Wand, Flip
5	W10726713	Rack, Steam and Roast
6	W10726711	Pot, Inner (Bowl)