

KitchenAid®

 
 
 
 
 
9-SPEED HAND MIXER

MODELS:

KHM9212CA0 (Candy Apple)
KHM9212MS0 (Medallion Silver)
KHM9212WH0 (White)
KHM9212OB0 (Onyx Black)
5KHM9212EOB0 (Onyx Black)
5KHM9212EER0 (Empire Red)

5KHM9212EAC0 (Almond Creme)
5KHM9212ECU0 (Contour Silver)
5KHM9212BER0 (Empire Red)
5KHM9212BAC0 (Almond Creme)
5KHM9212BCU0 (Contour Silver)

UNIT PARTS

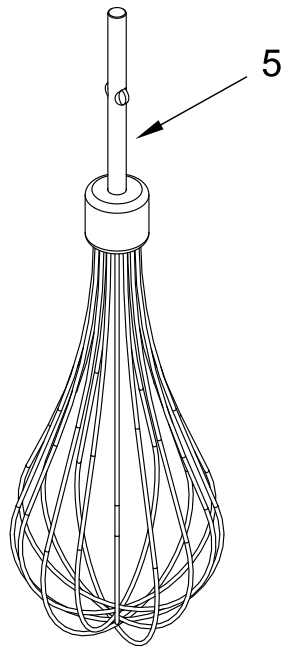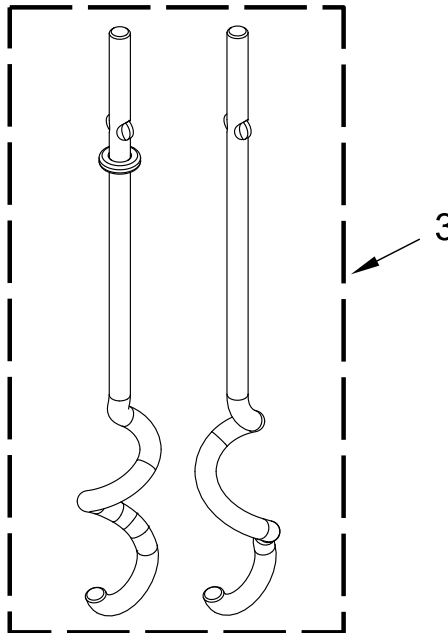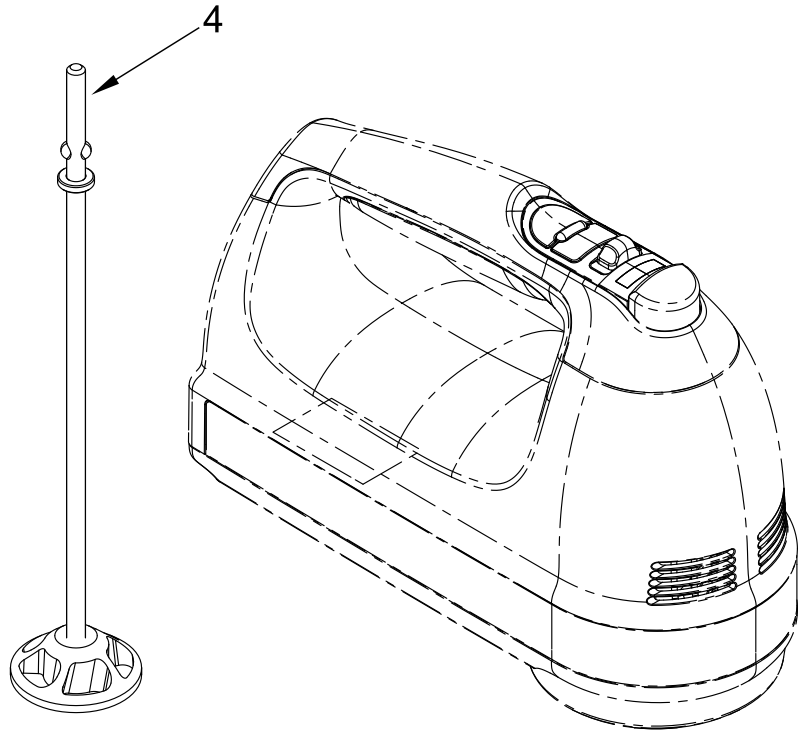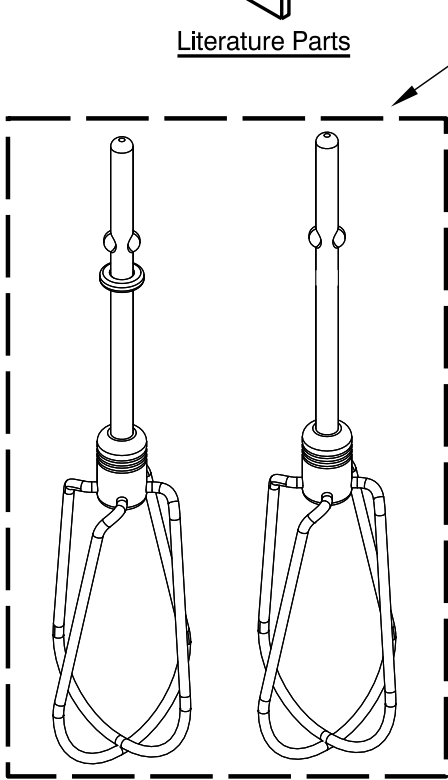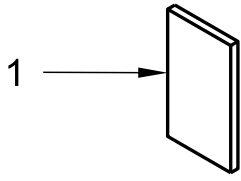

UNIT PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature
	W10434747	Use and Care Guide, U.S.
	W10466753	Use and Care Guide, Europe

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
2	W10435488	Beaters, (includes Right and Left)
3	W10490651	Hooks, Dough (includes Right and Left)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10490652	Rod, Blending
5	9702832	Whisk, Wire